

CHELMERPANEL

COMPOSITE

WOODGRAIN FENCE PANELS

PANEL INSTALLATION GUIDANCE

COMPOSITE FENCING INSTALLATION GUIDANCE

CHELMERPANEL

Please read these instructions carefully before installation. We recommend that you understand in detail the relevant laws and regulations in your area before installing your composite fencing. These installation instructions are intended to provide instructions for proper installation only and are not a substitute for legal and professional permission. The installation and use of our products must be in accordance with the relevant laws and regulations of the region in which they are installed. All risks and responsibilities associated with the installation are the responsibility of the user.

TOOLS NEEDED


Standard woodworking tools may be used. Below are tools which might be used for installing composite fencing.

- Circular saw
- Cordless Drill/Screw Driver
- Impact Drill
- Spirit level/Tape/Pencil


SAFETY ⚠ WARNING

When working on any construction project, you should wear protective clothing and safety equipment. Wear face shield, hearing protection, gloves, and long sleeves, particularly when cutting in confined spaces.

COMPOSITE FENCING AND ACCESSORIES

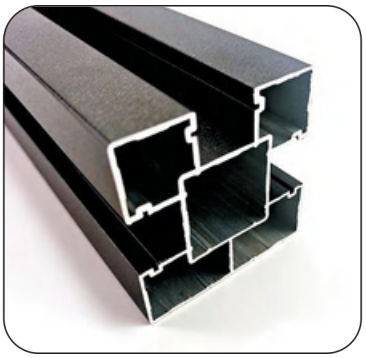

Aluminium Post

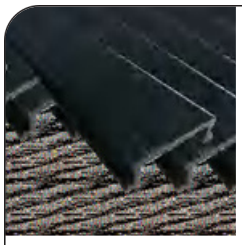

Aluminium Post Cover




Top Beam




Bottom Beam



Post Mounting Base

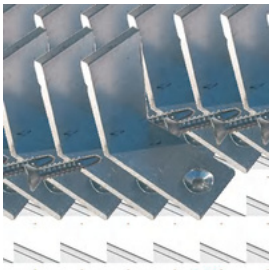

Angle Bracket

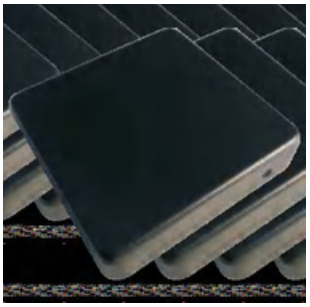

Aluminium Post Cap



Composite Fencing Board

COMPOSITE FENCING INSTALLATION GUIDANCE

CHELMERPANEL

1. IN GROUND INSTALLATION



2. ON GROUND INSTALLATION




COMPOSITE FENCING INSTALLATION GUIDANCE

CHELMERPANEL

IN GROUND INSTALLATION


1

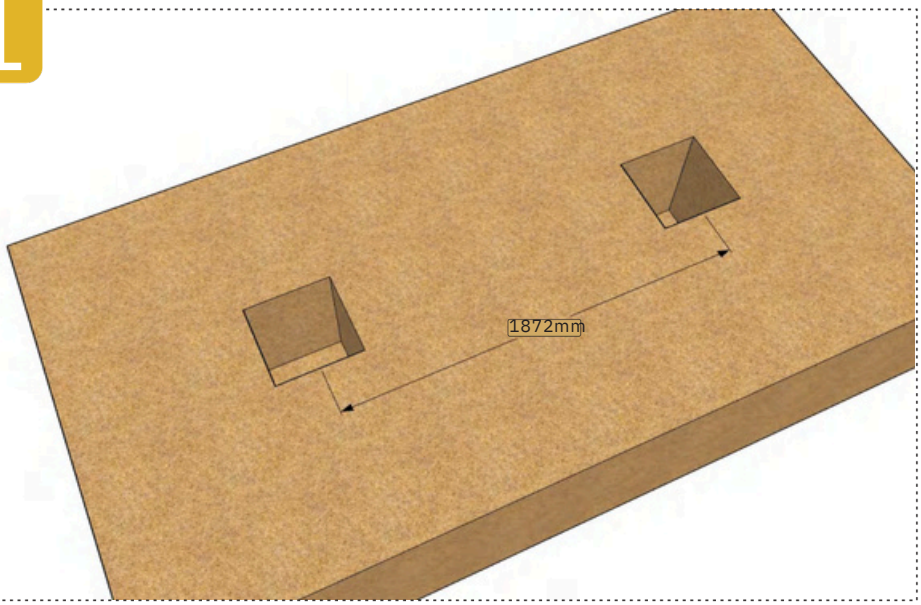


• Dig two holes in the ground according to the required spacing

2

• Insert the post into the hole, ensuring that at least 1830mm of the post extends above the ground

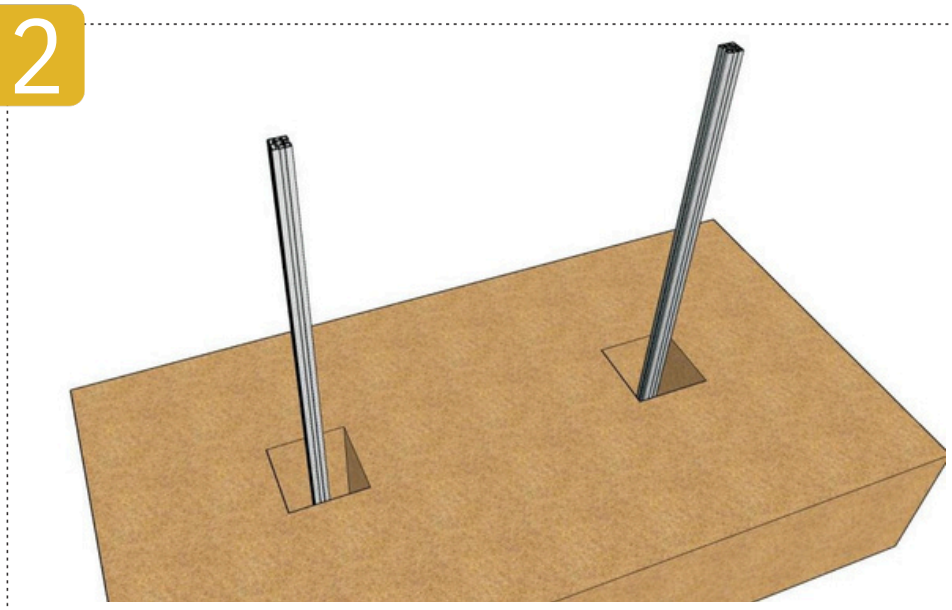

3

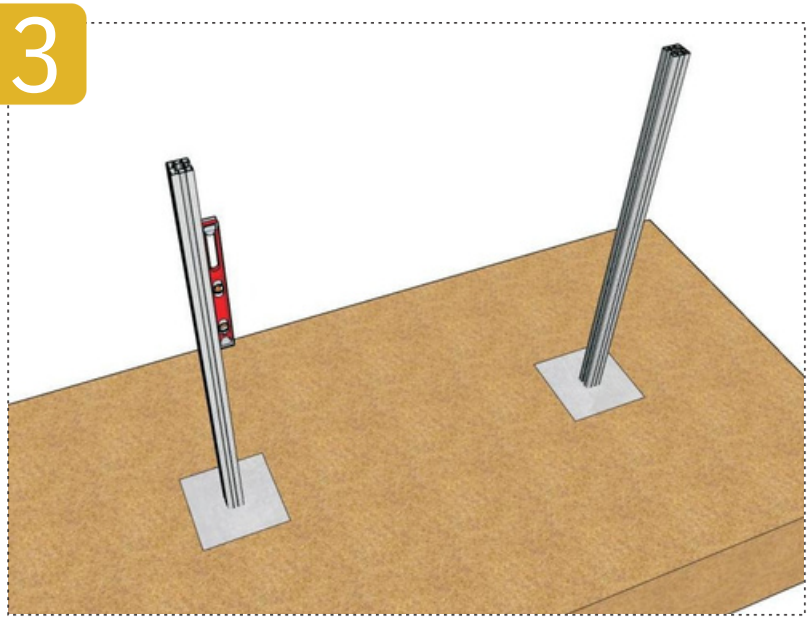


• Pour concrete around the post and use a level to adjust the post to make sure it is vertical, ensuring that the spacing between the top and bottom of the post is consistent. After the concrete is fully cured, proceed the installation of the fence panels.

COMPOSITE FENCING INSTALLATION GUIDANCE

CHELMERPANEL


ON GROUND INSTALLATION


1

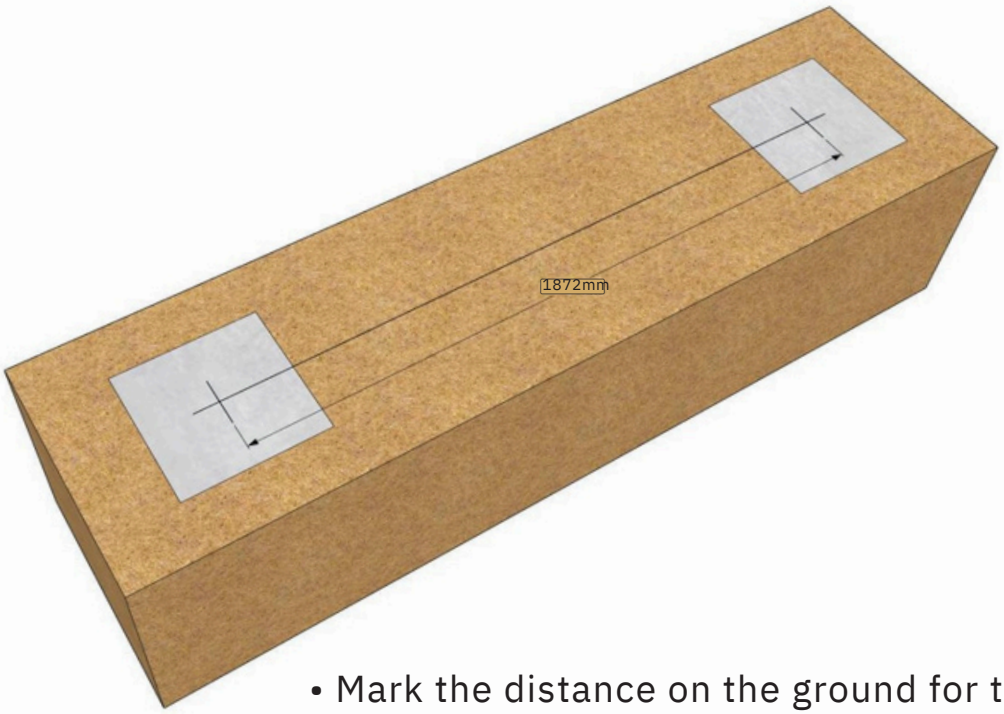

• Mark the distance on the ground for the width of the composite fencing

2

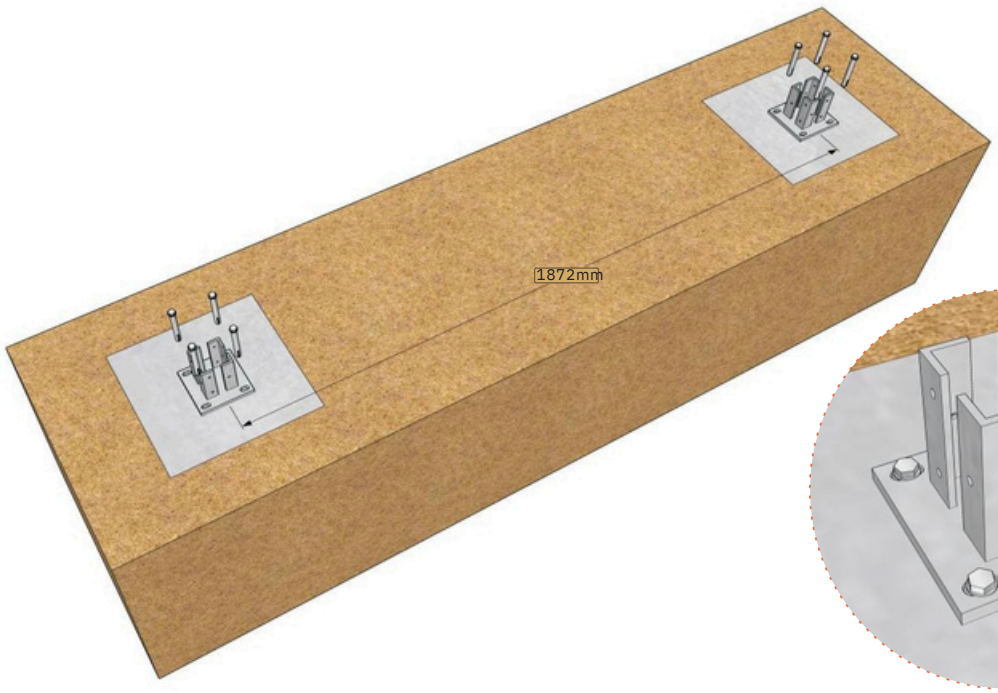


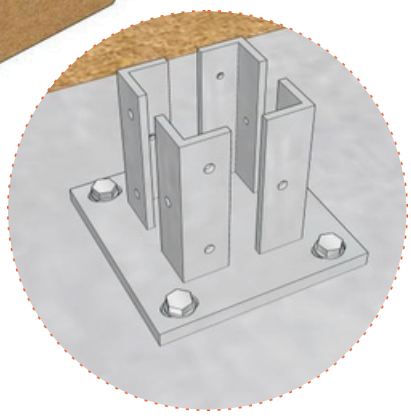

Place the post mounting base centrally on the marked line, drill the holes according to the holes on the mounting base and install the expansion bolts.


3




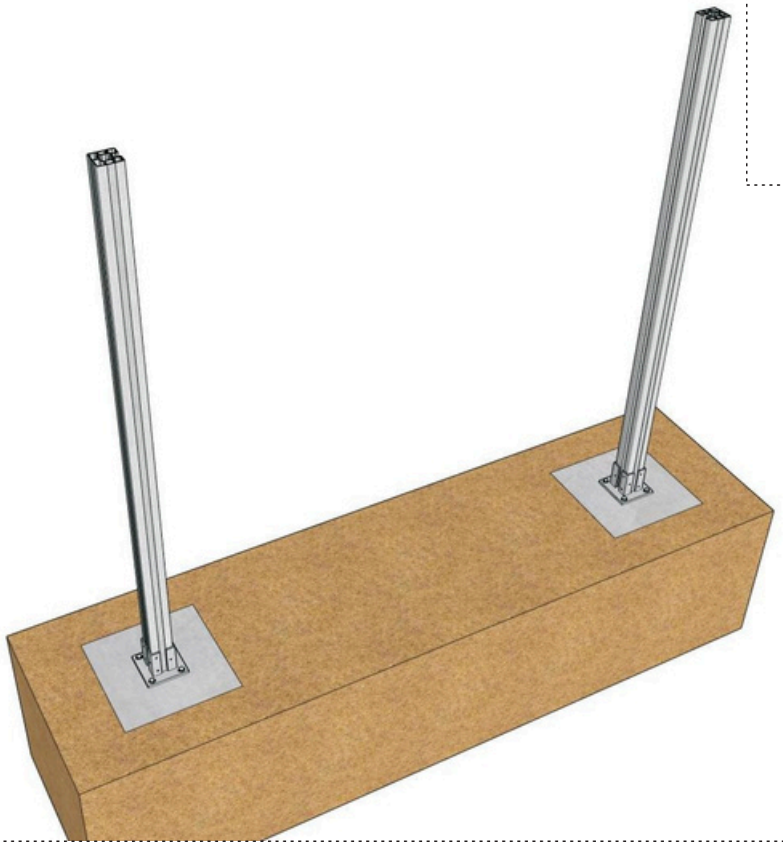

• Insert the post cover into the post firstly and place it into the mounting base.


4

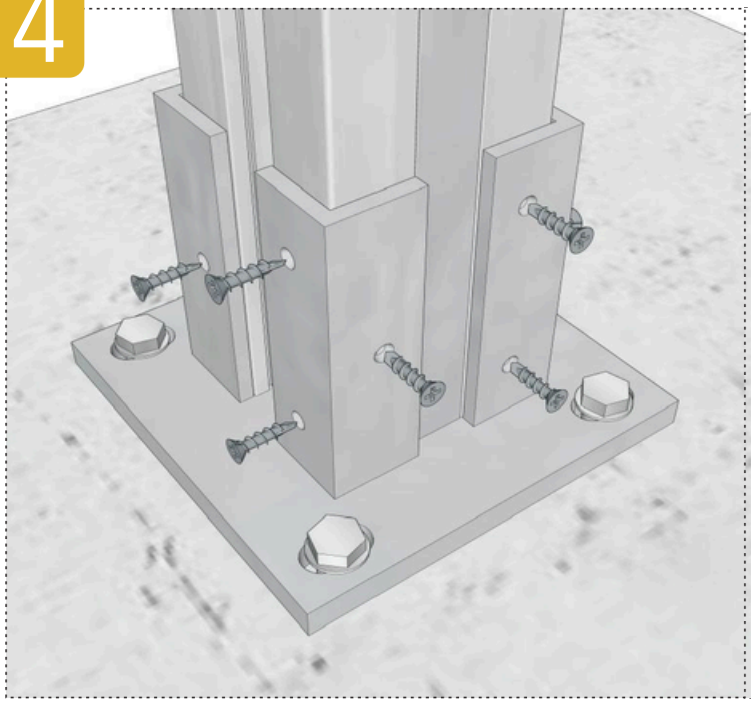

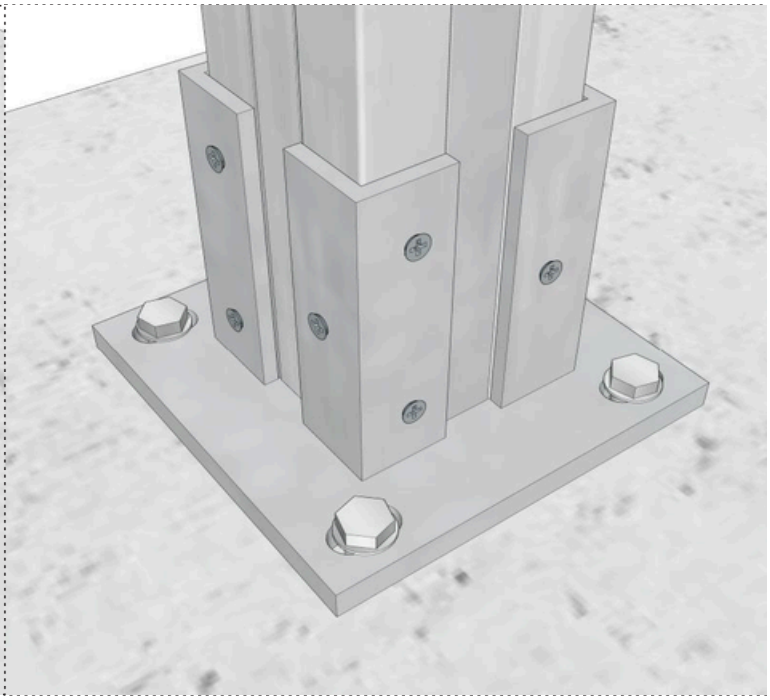


• Use self-drilling screws to fix the post in the mounting base.

5

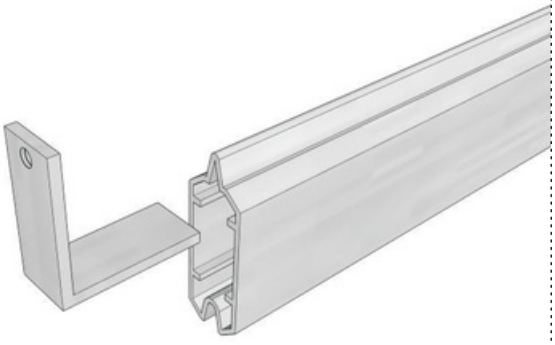


6

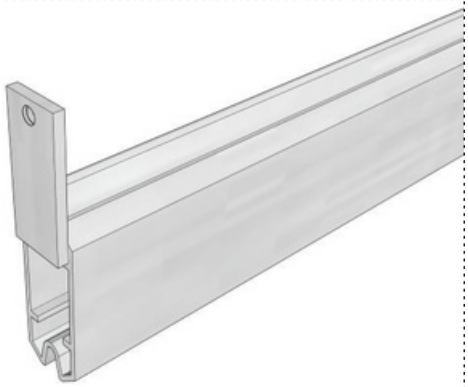


• Put the angle bracket into the bottom beam as above picture showed.

7

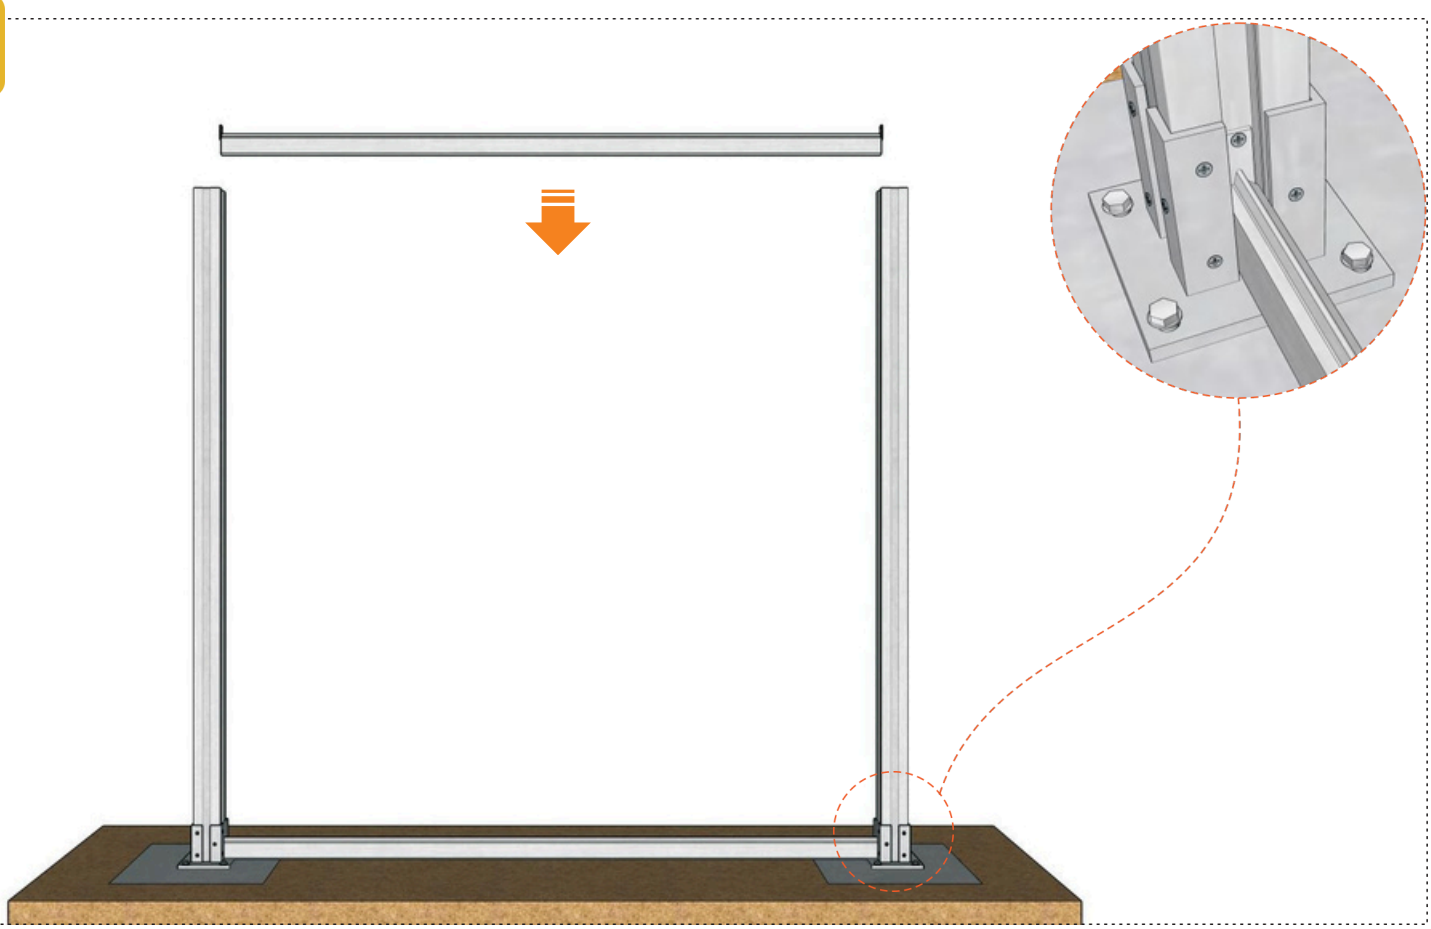

• Fix the bottom beam with a proper height above ground.

8

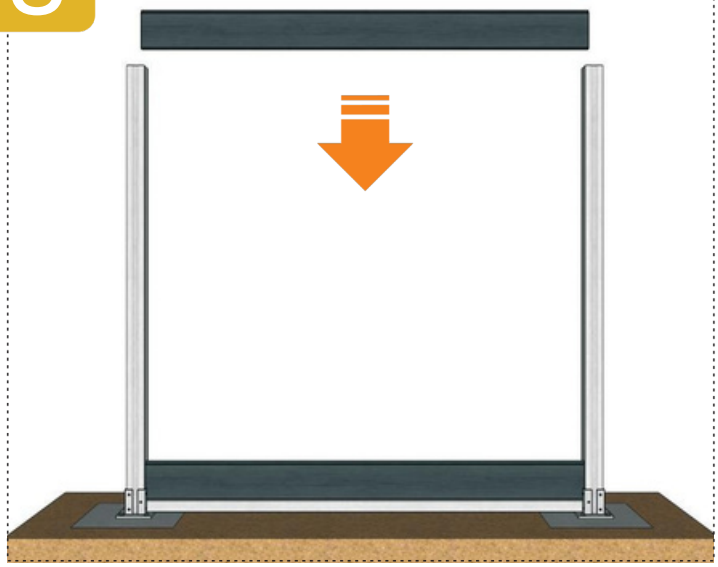

9



• Slide the composite fencing boards one by one.

10




11





• Insert the angle bracket into the top beam as above picture showed and fixed it with screws.


12

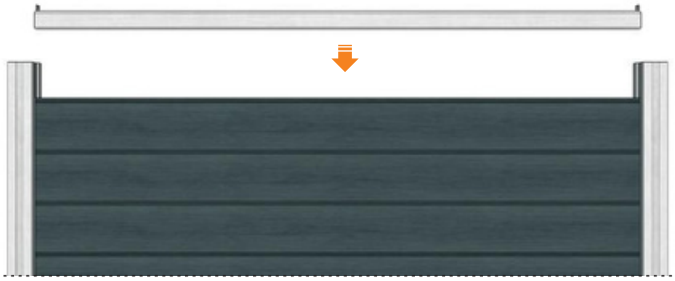




• Place the top beam

13

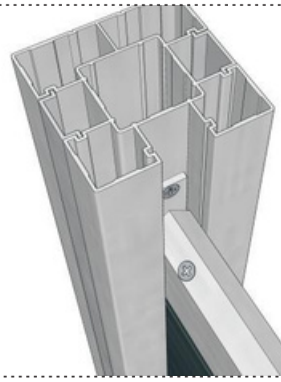


• Fix the bracket on the post

14

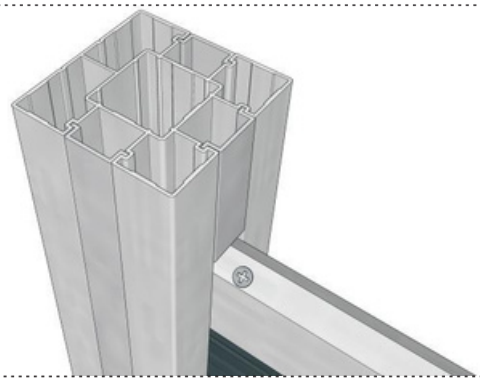

• Cut a proper length of post cover and slide it down to cover the bracket.

15

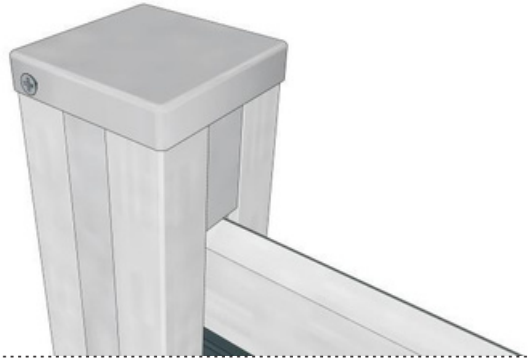

• Place the post caps and fix it with screws.